


04-048 Installation Instructions For EZ-Stick Marker Board Skins

Figure 1

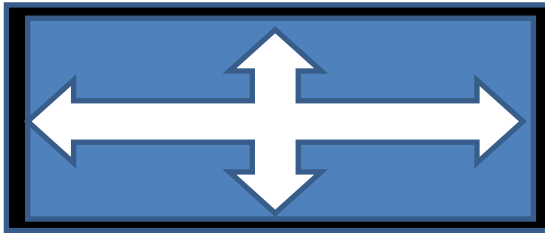

Measure Only What You Intend To Cover

Figure 1 shows that you want to measure the surface you plan to cover. You should make sure your boards is square. If not you would adjust your dimensions to fit.

Figure 2



Figure 2 is the profile view of the bottom and side of the board to be measured.

Figure 3

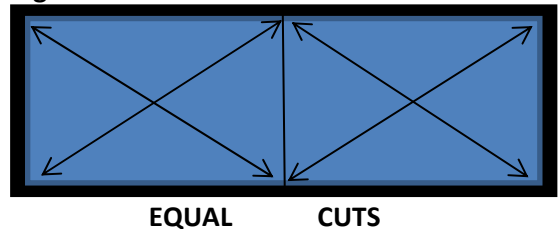


Figure 3 shows you can use 2 EZ-Stick Skins to cover boards over 12'. The seam will be covered by EZ-Stick Pressure Sensitive Batton that is 1" giving you more forgiveness in measuring .


Up to 8' per side for a 16' board preferable

Figure 4



Figure 4 is the profile view of the bottom and side of the board with a 1" in center for batton or simply overlap one over the other a few inches.

Figure 5

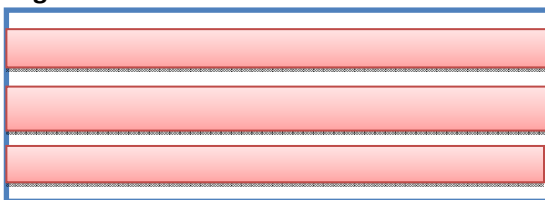

Start peeling from the top down

Figure 5 is the back of board and where you should start peeling. You should have someone to help hold the board for application.

- 1) Prior to installation you should clean the board thoroughly to remove any dust with an acetone product.
- 2) Insure proper fit by placing the board into the frame with the peel and stick back still in place.
- 3) After proper fit is established and you are ready to install, you should lean the board away at the top to allow access and pull tape down 2-3" all the way across and fold down.
- 4) Reinsert board at the top evenly applying pressure across the board to secure it.
- 5) Pull the bottom of the board away from the chalkboard being covered and then remove balance of tape. Apply pressure from top to bottom evenly.
- 6) To assure good contact use a laminating roller for even pressure over complete service.

Room #	Quantity	Length	Width

Use the space at the bottom right to document your measurements. If you are measuring a Figure 3 board you would measure each side and put 2 in quantity. Ex: Room #-101 Quantity-2 Length-8' Width-4' would give you a 16' long 4' wide board.